

Brunata FuturaComfort⁺ Installation Guide

UK-QB 10.1496/30.07.2009



General description

Electronic comfort meter for measuring room temperature or outside temperature.

Installation

Guideline number of meters: 1 per room

FuturaComfort⁺ must be placed approx. 1.5 m from the floor on an interior wall with no thermal bridge. A location which is never exposed to direct sunlight must be chosen. The installation location must not be above a heat source (radiator, television, etc.). It must be at least 1 m from a radiator.

Placing of battery

In connection with the installation of FuturaComfort⁺, it must be checked that the battery and cable are placed as shown in the photo on the right before the front section is put on.

NB. The cable is twisted to ensure that it does not flip up, but lies flat along the bottom of the back section.



Measuring outside temperature

FuturaComfort⁺ is placed in a water-tight plastic box with screw cap. The box is installed on the north side of the house where there is no direct sunlight. The meter must be installed where it cannot be reached by children.

FuturaComfort⁺ is mounted on the wall using two sticky pads and two round-head screws. Remember the spacing ring. The underside of the screw head must be flat and it must not be designed for countersinking.

Note that the sticky pads are only fully effective after approx. 24 hours.

When the meter has been mounted on the wall, the radio transmitter must be activated using the hand terminal.

*Brunata a/s is a 100 % Danish owned company.
We have more than 90 years of experience within
developing and producing heat cost allocators,
heating accounts and heating services. For further
information please contact Brunata a/s.*